

# Brother Printer Drivers Mac

Brother Printer Model for Which Drivers are available from Apple. Read more details on post [Brother Printer Drivers Mac](#) for detailed troubleshooting, download, installation and setup information of Brother Printer.

Model	Version	Print	Scan	Fax
Brother DCP-145C	4.5.2	P	S	
Brother DCP-1510 series	4.0.5	P	S	
Brother DCP-1600 series	4.0.5	P	S	
Brother DCP-1608	4.0.5	P	S	
Brother DCP-1610NW series	4.0.5	P	S	
Brother DCP-1610W series	4.0.5	P	S	
Brother DCP-1618W	4.0.5	P	S	
Brother DCP-1619	4.0.5	P	S	
Brother DCP-163C	4.5.2	P	S	
Brother DCP-165C	4.5.2	P	S	
Brother DCP-167C	4.5.2	P	S	
Brother DCP-185C	4.5.2	P	S	
Brother DCP-193C	4.5.2	P	S	
Brother DCP-195C	4.5.2	P	S	
Brother DCP-197C	4.5.2	P	S	

---

Brother DCP-365CN	4.5.2	P	S
-------------------	-------	---	---

---

---

Brother DCP-373CW	4.5.2	P	S
-------------------	-------	---	---

---

---

Brother DCP-375CW	4.5.2	P	S
-------------------	-------	---	---

---

---

Brother DCP-377CW	4.5.2	P	S
-------------------	-------	---	---

---

---

Brother DCP-383C	4.5.2	P	S
------------------	-------	---	---

---

---

Brother DCP-385C	4.5.2	P	S
------------------	-------	---	---

---

---

Brother DCP-387C	4.5.2	P	S
------------------	-------	---	---

---

---

Brother DCP-390CN	4.5.2	P	S
-------------------	-------	---	---

---

---

Brother DCP-395CN	4.5.2	P	S
-------------------	-------	---	---

---

---

Brother DCP-535CN	4.5.2	P	S
-------------------	-------	---	---

---

---

Brother DCP-585CW	4.5.2	P	S
-------------------	-------	---	---

---

---

Brother DCP-595CN	4.5.2	P	S
-------------------	-------	---	---

---

---

Brother DCP-6690CW	4.5.2	P	S
--------------------	-------	---	---

---

---

Brother DCP-7030	4.5.2	P	S
------------------	-------	---	---

---

---

Brother DCP-7040	4.5.2	P	S
------------------	-------	---	---

---

---

Brother DCP-7045N	4.5.2	P	S
-------------------	-------	---	---

---

---

Brother DCP-7055	4.5.2	P	S
------------------	-------	---	---

---

---

Brother DCP-7055W	4.5.2	P	S
-------------------	-------	---	---

---

---

Brother DCP-7057	4.5.2	P	S
------------------	-------	---	---

---

Brother DCP-7057W	4.5.2	P	S
Brother DCP-7060D	4.5.2	P	S
Brother DCP-7065DN	4.5.2	P	S
Brother DCP-7070DW	4.5.2	P	S
Brother DCP-7080	4.0.8	P	S
Brother DCP-7080D	4.0.8	P	S
Brother DCP-7180DN	4.0.8	P	S
Brother DCP-7189DW	4.0.8	P	S
Brother DCP-8070D	4.5.2	P	S
Brother DCP-8080DN	4.5.2	P	S
Brother DCP-8085DN	4.5.2	P	S
Brother DCP-8110D	4.5.2	P	S
Brother DCP-8110DN	4.5.2	P	S
Brother DCP-8112DN	4.5.2	P	S
Brother DCP-8150DN	4.5.2	P	S
Brother DCP-8152DN	4.5.2	P	S
Brother DCP-8155DN	4.5.2	P	S
Brother DCP-8157DN	4.5.2	P	S
Brother DCP-8250DN	4.5.2	P	S

---

Brother DCP-9010CN	4.5.2	P	S
--------------------	-------	---	---

---

---

Brother DCP-9015CDW	4.1.2	P	S
---------------------	-------	---	---

---

---

Brother DCP-9017CDW	4.1.2	P	S
---------------------	-------	---	---

---

---

Brother DCP-9020CDN	4.1.2	P	S
---------------------	-------	---	---

---

---

Brother DCP-9020CDW	4.1.2	P	S
---------------------	-------	---	---

---

---

Brother DCP-9022CDW	4.1.3	P	S
---------------------	-------	---	---

---

---

Brother DCP-9040CN	4.5.2	P	S
--------------------	-------	---	---

---

---

Brother DCP-9042CDN	4.5.2	P	S
---------------------	-------	---	---

---

---

Brother DCP-9045CDN	4.5.2	P	S
---------------------	-------	---	---

---

---

Brother DCP-9055CDN	4.5.2	P	S
---------------------	-------	---	---

---

---

Brother DCP-9270CDN	4.5.2	P	S
---------------------	-------	---	---

---

---

Brother DCP-J100	4.1.2	P	S
------------------	-------	---	---

---

---

Brother DCP-J105	4.1.2	P	S
------------------	-------	---	---

---

---

Brother DCP-J125	4.5.2	P	S
------------------	-------	---	---

---

---

Brother DCP-J132N	4.1.2	P	S
-------------------	-------	---	---

---

---

Brother DCP-J132W	4.1.2	P	S
-------------------	-------	---	---

---

---

Brother DCP-J137N	4.0.3	P	S
-------------------	-------	---	---

---

---

Brother DCP-J140W	4.5.2	P	S
-------------------	-------	---	---

---

---

Brother DCP-J152N	4.1.2	P	S
-------------------	-------	---	---

---

Brother DCP-J152W	4.1.2	P	S
Brother DCP-J172W	4.1.2	P	S
Brother DCP-J315W	4.5.2	P	S
Brother DCP-J4110DW	4.5.4	P	S
Brother DCP-J4120DW	4.0.9	P	S
Brother DCP-J4210N	4.5.4	P	S
Brother DCP-J4215N	4.5.4	P	S
Brother DCP-J4220N	4.0.9	P	S
Brother DCP-J4225N	4.0.3	P	S
Brother DCP-J515N	4.5.2	P	S
Brother DCP-J515W	4.5.2	P	S
Brother DCP-J525N	4.5.2	P	S
Brother DCP-J525W	4.5.2	P	S
Brother DCP-J540N	4.5.2	P	S
Brother DCP-J552DW	4.1.2	P	S
Brother DCP-J552N	4.1.2	P	S
Brother DCP-J557N	4.0.3	P	S
Brother DCP-J562DW	4.0.4	P	S
Brother DCP-J562N	4.0.4	P	S

Brother DCP-J715N	4.5.2	P	S
Brother DCP-J715W	4.5.2	P	S
Brother DCP-J725DW	4.5.2	P	S
Brother DCP-J725N	4.5.2	P	S
Brother DCP-J740N	4.5.2	P	S
Brother DCP-J752DW	4.1.2	P	S
Brother DCP-J752N	4.1.2	P	S
Brother DCP-J757N	4.0.3	P	S
Brother DCP-J762N	4.0.3	P	S
Brother DCP-J925DW	4.5.2	P	S
Brother DCP-J925N	4.5.2	P	S
Brother DCP-J940N	4.5.2	P	S
Brother DCP-J952N	4.1.2	P	S
Brother DCP-J957N	4.0.3	P	S
Brother DCP-J962N	4.0.3	P	S
Brother DCP-J963N	4.0.3	P	S
Brother DCP-L2500D series	4.0.8	P	S
Brother DCP-L2520D series	4.0.8	P	S
Brother DCP-L2520DW series	4.0.8	P	S

Brother DCP-L2540DN series	4.0.8	P	S
Brother DCP-L2540DW series	4.0.8	P	S
Brother DCP-L2560DW series	4.0.8	P	S
Brother DCP-L8400CDN	4.0.5	P	S
Brother DCP-L8450CDW	4.0.5	P	S
Brother DCP-T300	4.0.4	P	S
Brother DCP-T500W	4.0.4	P	S
Brother DCP-T700W	4.0.4	P	S
Brother FAX-2810N	4.5.2	P	F
Brother FAX-2840	4.5.2	P	F
Brother FAX-2845	4.5.2	P	F
Brother FAX-2890	4.5.2	P	F
Brother FAX-2940	4.5.2	P	F
Brother FAX-2950	4.5.2	P	F
Brother FAX-2990	4.5.2	P	F
Brother FAX-7860DW	4.5.2	P	F
Brother FAX-L2700DN series	4.0.8	P	F
Brother HL-1110 series	4.0.5	P	
Brother HL-1200 series	4.0.5	P	

---

Brother HL-1208	4.0.5	P
-----------------	-------	---

---

---

Brother HL-1210W series	4.0.5	P
-------------------------	-------	---

---

---

Brother HL-1218W	4.0.5	P
------------------	-------	---

---

---

Brother HL-2130 series	4.5.2	P
------------------------	-------	---

---

---

Brother HL-2140 series	4.5.2	P
------------------------	-------	---

---

---

Brother HL-2150N series	4.5.2	P
-------------------------	-------	---

---

---

Brother HL-2170W series	4.5.2	P
-------------------------	-------	---

---

---

Brother HL-2220 series	4.5.2	P
------------------------	-------	---

---

---

Brother HL-2230 series	4.5.2	P
------------------------	-------	---

---

---

Brother HL-2240 series	4.5.2	P
------------------------	-------	---

---

---

Brother HL-2240D series	4.5.2	P
-------------------------	-------	---

---

---

Brother HL-2250DN series	4.5.2	P
--------------------------	-------	---

---

---

Brother HL-2260	4.0.8	P
-----------------	-------	---

---

---

Brother HL-2260D	4.0.8	P
------------------	-------	---

---

---

Brother HL-2270DW series	4.5.2	P
--------------------------	-------	---

---

---

Brother HL-2280DW	4.5.2	P
-------------------	-------	---

---

---

Brother HL-2560DN	4.0.8	P
-------------------	-------	---

---

---

Brother HL-2569DW	4.0.8	P
-------------------	-------	---

---

---

Brother HL-2600CN BR-Script3	4.0.2	P
------------------------------	-------	---

---

---

Brother HL-2700CN BR-Script3	4.0.2	P
------------------------------	-------	---

---

---

Brother HL-3040CN series	4.5.2	P
--------------------------	-------	---

---

---

Brother HL-3045CN series	4.5.2	P
--------------------------	-------	---

---

---

Brother HL-3070CW series	4.5.2	P
--------------------------	-------	---

---

---

Brother HL-3075CW series	4.5.2	P
--------------------------	-------	---

---

---

Brother HL-3140CW series	4.1.2	P
--------------------------	-------	---

---

---

Brother HL-3142CW series	4.1.3	P
--------------------------	-------	---

---

---

Brother HL-3150CDN series	4.1.2	P
---------------------------	-------	---

---

---

Brother HL-3150CDW series	4.1.2	P
---------------------------	-------	---

---

---

Brother HL-3152CDW series	4.1.3	P
---------------------------	-------	---

---

---

Brother HL-3170CDW series	4.1.2	P
---------------------------	-------	---

---

---

Brother HL-3172CDW series	4.1.3	P
---------------------------	-------	---

---

---

Brother HL-3180CDW	4.1.2	P
--------------------	-------	---

---

---

Brother HL-3450CN BR-Script3	4.0.2	P
------------------------------	-------	---

---

---

Brother HL-4000CN PS	4.0.2	P
----------------------	-------	---

---

---

Brother HL-4040CDN series	4.5.2	P
---------------------------	-------	---

---

---

Brother HL-4040CN series	4.5.2	P
--------------------------	-------	---

---

---

Brother HL-4050CDN series	4.5.2	P
---------------------------	-------	---

---

---

Brother HL-4070CDW series	4.5.2	P
---------------------------	-------	---

---

---

Brother HL-4140CN series	4.5.2	P
<hr/>		
Brother HL-4150CDN series	4.5.2	P
<hr/>		
Brother HL-4200CN PS	4.0.2	P
<hr/>		
Brother HL-4570CDW series	4.5.2	P
<hr/>		
Brother HL-5340D series	4.5.2	P
<hr/>		
Brother HL-5350DN series	4.5.2	P
<hr/>		
Brother HL-5370DW series	4.5.2	P
<hr/>		
Brother HL-5380DN series	4.5.2	P
<hr/>		
Brother HL-5440D series	4.5.2	P
<hr/>		
Brother HL-5450DN series	4.5.2	P
<hr/>		
Brother HL-5470DW series	4.5.2	P
<hr/>		
Brother HL-6180DW series	4.5.2	P
<hr/>		
Brother HL-L2300 series	4.0.8	P
<hr/>		
Brother HL-L2300D series	4.0.8	P
<hr/>		
Brother HL-L2305 series	4.0.8	P
<hr/>		
Brother HL-L2320D series	4.0.8	P
<hr/>		
Brother HL-L2340D series	4.0.8	P
<hr/>		
Brother HL-L2360D series	4.0.8	P
<hr/>		
Brother HL-L2380DW series	4.0.8	P
<hr/>		

Brother HL-L8250CDN series	4.0.5	P		
Brother HL-L8350CDW series	4.0.5	P		
Brother HL-L9200CDW series	4.0.5	P		
Brother HL-L9300CDW series	4.0.5	P		
Brother HL-S7000DN series	4.1.6	P		
Brother MFC-1810 series	4.0.5	P	S	F
Brother MFC-1900 series	4.0.5	P	S	F
Brother MFC-1906	4.0.5	P	S	F
Brother MFC-1908	4.0.5	P	S	F
Brother MFC-1910NW series	4.0.5	P	S	F
Brother MFC-1910W series	4.0.5	P	S	F
Brother MFC-1919NW	4.0.5	P	S	F
Brother MFC-250C	4.5.2	P	S	F
Brother MFC-253CW	4.5.2	P	S	F
Brother MFC-255CW	4.5.2	P	S	F
Brother MFC-257CW	4.5.2	P	S	F
Brother MFC-290C	4.5.2	P	S	F
Brother MFC-295CN	4.5.2	P	S	F
Brother MFC-297C	4.5.2	P	S	F

Brother MFC-490CN	4.5.2	P	S	F
Brother MFC-490CW	4.5.2	P	S	F
Brother MFC-495CN	4.5.2	P	S	F
Brother MFC-495CW	4.5.2	P	S	F
Brother MFC-5490CN	4.5.2	P	S	F
Brother MFC-5890CN	4.5.2	P	S	F
Brother MFC-5895CW	4.5.2	P	S	F
Brother MFC-6490CN	4.5.2	P	S	F
Brother MFC-6490CW	4.5.2	P	S	F
Brother MFC-670CD	4.5.2	P	S	F
Brother MFC-675CD	4.5.2	P	S	F
Brother MFC-6890CDW	4.5.2	P	S	F
Brother MFC-6890CN	4.5.2	P	S	F
Brother MFC-695CDN	4.5.2	P	S	F
Brother MFC-7240	4.5.2	P	S	F
Brother MFC-7290	4.5.2	P	S	F
Brother MFC-7320	4.5.2	P	S	F
Brother MFC-7340	4.5.2	P	S	F
Brother MFC-7345N	4.5.2	P	S	F

Brother MFC-735CD	4.5.2	P	S	F
Brother MFC-7360	4.5.2	P	S	F
Brother MFC-7360N	4.5.2	P	S	F
Brother MFC-7362N	4.5.2	P	S	F
Brother MFC-7365DN	4.5.2	P	S	F
Brother MFC-7380	4.0.8	P	S	F
Brother MFC-7440N	4.5.2	P	S	F
Brother MFC-7450	4.5.2	P	S	F
Brother MFC-7460DN	4.5.2	P	S	F
Brother MFC-7470D	4.5.2	P	S	F
Brother MFC-7480D	4.0.8	P	S	F
Brother MFC-7840N	4.5.2	P	S	F
Brother MFC-7840W	4.5.2	P	S	F
Brother MFC-7860DN	4.5.2	P	S	F
Brother MFC-7860DW	4.5.2	P	S	F
Brother MFC-7880DN	4.0.8	P	S	F
Brother MFC-7889DW	4.0.8	P	S	F
Brother MFC-790CW	4.5.2	P	S	F
Brother MFC-795CW	4.5.2	P	S	F

Brother MFC-8370DN	4.5.2	P	S	F
Brother MFC-8380DN	4.5.2	P	S	F
Brother MFC-8480DN	4.5.2	P	S	F
Brother MFC-8510DN	4.5.2	P	S	F
Brother MFC-8512DN	4.5.2	P	S	F
Brother MFC-8515DN	4.5.2	P	S	F
Brother MFC-8520DN	4.5.2	P	S	F
Brother MFC-8680DN	4.5.2	P	S	F
Brother MFC-8690DW	4.5.2	P	S	F
Brother MFC-8710DW	4.5.2	P	S	F
Brother MFC-8712DW	4.5.2	P	S	F
Brother MFC-8810DW	4.5.2	P	S	F
Brother MFC-8880DN	4.5.2	P	S	F
Brother MFC-8890DW	4.5.2	P	S	
Brother MFC-8910DW	4.5.2	P	S	F
Brother MFC-8912DW	4.5.2	P	S	F
Brother MFC-8950DW	4.5.2	P	S	F
Brother MFC-8952DW	4.5.2	P	S	F
Brother MFC-9010CN	4.5.2	P	S	F

Brother MFC-9120CN	4.5.2	P	S	F
Brother MFC-9125CN	4.5.2	P	S	F
Brother MFC-9130CW	4.1.2	P	S	F
Brother MFC-9140CDN	4.1.2	P	S	F
Brother MFC-9142CDN	4.1.3	P	S	F
Brother MFC-930CDN	4.5.2	P	S	F
Brother MFC-9320CW	4.5.2	P	S	F
Brother MFC-9325CW	4.5.2	P	S	F
Brother MFC-9330CDW	4.1.2	P	S	F
Brother MFC-9332CDW	4.1.3	P	S	F
Brother MFC-9335CDW	4.1.2	P	S	F
Brother MFC-9340CDW	4.1.2	P	S	F
Brother MFC-9342CDW	4.1.3	P	S	F
Brother MFC-935CDN	4.5.2	P	S	F
Brother MFC-9420CN	4.5.2	P	S	F
Brother MFC-9440CN	4.5.2	P	S	F
Brother MFC-9450CDN	4.5.2	P	S	F
Brother MFC-9460CDN	4.5.2	P	S	F
Brother MFC-9465CDN	4.5.2	P	S	F

Brother MFC-9560CDW	4.5.2	P	S	F
Brother MFC-9640CW	4.5.2	P	S	F
Brother MFC-9840CDW	4.5.2	P	S	F
Brother MFC-990CW	4.5.2	P	S	F
Brother MFC-9970CDW	4.5.2	P	S	F
Brother MFC-J200	4.1.2	P	S	F
Brother MFC-J220	4.5.2	P	S	F
Brother MFC-J2310	4.5.4	P	S	F
Brother MFC-J2320	4.0.9	P	S	F
Brother MFC-J245	4.1.2	P	S	F
Brother MFC-J2510	4.5.4	P	S	F
Brother MFC-J265W	4.5.2	P	S	F
Brother MFC-J270W	4.5.2	P	S	F
Brother MFC-J2720	4.0.9	P	S	F
Brother MFC-J280W	4.5.2	P	S	F
Brother MFC-J285DW	4.1.2	P	S	F
Brother MFC-J3520	4.0.10	P	S	F
Brother MFC-J3720	4.0.10	P	S	F
Brother MFC-J410	4.5.2	P	S	F

Brother MFC-J410W	4.5.2	P	S	F
Brother MFC-J415W	4.5.2	P	S	F
Brother MFC-J425W	4.5.2	P	S	F
Brother MFC-J430W	4.5.2	P	S	F
Brother MFC-J4310DW	4.5.4	P	S	F
Brother MFC-J4315DW	4.5.4	P	S	F
Brother MFC-J4320DW	4.0.9	P	S	F
Brother MFC-J432W	4.5.2	P	S	F
Brother MFC-J435W	4.5.2	P	S	F
Brother MFC-J4410DW	4.5.4	P	S	F
Brother MFC-J4415DW	4.5.4	P	S	F
Brother MFC-J4420DW	4.0.9	P	S	F
Brother MFC-J4505DW	4.5.4	P	S	F
Brother MFC-J450DW	4.1.2	P	S	F
Brother MFC-J4510DW	4.5.4	P	S	F
Brother MFC-J4510N	4.5.4	P	S	F
Brother MFC-J4515DW	4.5.4	P	S	F
Brother MFC-J4520DW	4.0.9	P	S	F
Brother MFC-J460DW	4.0.4	P	S	F

Brother MFC-J4610DW	4.5.4	P	S	F
Brother MFC-J4615DW	4.5.4	P	S	F
Brother MFC-J4620DW	4.0.9	P	S	F
Brother MFC-J4625DW	4.0.9	P	S	F
Brother MFC-J470DW	4.1.2	P	S	F
Brother MFC-J4710DW	4.5.4	P	S	F
Brother MFC-J4720N	4.0.9	P	S	F
Brother MFC-J4725N	4.0.3	P	S	F
Brother MFC-J475DW	4.1.2	P	S	F
Brother MFC-J480DW	4.0.4	P	S	F
Brother MFC-J4810DN	4.5.4	P	S	F
Brother MFC-J485DW	4.0.4	P	S	F
Brother MFC-J4910CDW	4.5.4	P	S	F
Brother MFC-J5320DW	4.0.9	P	S	F
Brother MFC-J5520DW	4.0.9	P	S	F
Brother MFC-J5620CDW	4.0.9	P	S	F
Brother MFC-J5620DW	4.0.9	P	S	F
Brother MFC-J5625DW	4.0.9	P	S	F
Brother MFC-J5720CDW	4.0.9	P	S	F

Brother MFC-J5720DW	4.0.9	P	S	F
Brother MFC-J5820DN	4.0.9	P	S	F
Brother MFC-J5910CDW	4.5.2	P	S	F
Brother MFC-J5910DW	4.5.2	P	S	F
Brother MFC-J5920DW	4.0.9	P	S	F
Brother MFC-J615N	4.5.2	P	S	F
Brother MFC-J615W	4.5.2	P	S	F
Brother MFC-J625DW	4.5.2	P	S	F
Brother MFC-J630W	4.5.2	P	S	F
Brother MFC-J650DW	4.1.2	P	S	F
Brother MFC-J6510DW	4.5.2	P	S	F
Brother MFC-J6520DW	4.0.10	P	S	F
Brother MFC-J6570CDW	4.0.10	P	S	F
Brother MFC-J6573CDW	4.0.5	P	S	F
Brother MFC-J6710CDW	4.5.2	P	S	F
Brother MFC-J6710DW	4.5.2	P	S	F
Brother MFC-J6720DW	4.0.10	P	S	F
Brother MFC-J6770CDW	4.0.10	P	S	F
Brother MFC-J680DW	4.0.3	P	S	F

Brother MFC-J6910CDW	4.5.2	P	S	F
Brother MFC-J6910DW	4.5.2	P	S	F
Brother MFC-J6920DW	4.0.10	P	S	F
Brother MFC-J6925DW	4.0.10	P	S	F
Brother MFC-J6970CDW	4.0.10	P	S	F
Brother MFC-J6973CDW	4.0.5	P	S	F
Brother MFC-J6975CDW	4.0.10	P	S	F
Brother MFC-J6990CDW	4.0.5	P	S	F
Brother MFC-J700D	4.5.2	P	S	F
Brother MFC-J705D	4.5.2	P	S	F
Brother MFC-J710D	4.5.2	P	S	F
Brother MFC-J720D	4.1.2	P	S	F
Brother MFC-J727D	4.0.3	P	S	F
Brother MFC-J730DN	4.0.4	P	S	F
Brother MFC-J800D	4.5.2	P	S	F
Brother MFC-J805D	4.5.2	P	S	F
Brother MFC-J810D	4.5.2	P	S	F
Brother MFC-J810DN	4.5.2	P	S	F
Brother MFC-J820DN	4.1.2	P	S	F

Brother MFC-J825DW	4.5.2	P	S	F
Brother MFC-J825N	4.5.2	P	S	F
Brother MFC-J827DN	4.0.3	P	S	F
Brother MFC-J830DN	4.0.3	P	S	F
Brother MFC-J835DW	4.5.2	P	S	F
Brother MFC-J840N	4.5.2	P	S	F
Brother MFC-J850DN	4.5.2	P	S	F
Brother MFC-J855DN	4.5.2	P	S	F
Brother MFC-J860DN	4.5.2	P	S	F
Brother MFC-J870DW	4.1.2	P	S	F
Brother MFC-J870N	4.1.2	P	S	F
Brother MFC-J875DW	4.1.2	P	S	F
Brother MFC-J877N	4.0.3	P	S	F
Brother MFC-J880DW	4.0.3	P	S	F
Brother MFC-J880N	4.0.3	P	S	F
Brother MFC-J885DW	4.0.3	P	S	F
Brother MFC-J890DN	4.1.2	P	S	F
Brother MFC-J897DN	4.0.3	P	S	F
Brother MFC-J900DN	4.0.3	P	S	F

Brother MFC-J950DN	4.5.2	P	S	F
Brother MFC-J955DN	4.5.2	P	S	F
Brother MFC-J960DN	4.5.2	P	S	F
Brother MFC-J980DN	4.1.2	P	S	F
Brother MFC-J987DN	4.0.3	P	S	F
Brother MFC-J990DN	4.0.3	P	S	F
Brother MFC-L2700D series	4.0.8	P	S	F
Brother MFC-L2700DW series	4.0.8	P	S	F
Brother MFC-L2705DW	4.0.8	P	S	F
Brother MFC-L2720DN series	4.0.8	P	S	F
Brother MFC-L2720DW series	4.0.8	P	S	F
Brother MFC-L2740DW series	4.0.8	P	S	F
Brother MFC-L8600CDW	4.0.5	P	S	F
Brother MFC-L8650CDW	4.0.5	P	S	F
Brother MFC-L8850CDW	4.0.5	P	S	F
Brother MFC-L9550CDW	4.0.5	P	S	F
Brother MFC-T800W	4.0.4	P	S	F
Brother PT-18NR	3.1.1	P		
Brother PT-24	3.1.1	P		

---

Brother PT-2700	3.1.1	P
<hr/>		
Brother PT-2730	3.1.1	P
<hr/>		
Brother PT-3600	3.1.1	P
<hr/>		
Brother PT-9500PC	3.1.2	P
<hr/>		
Brother PT-9600	3.1.1	P
<hr/>		
Brother PT-9700PC	3.1.3	P
<hr/>		
Brother PT-9800PCN	3.1.3	P
<hr/>		
Brother PT-D450	4.0.3	P
<hr/>		
Brother PT-D600	4.0.3	P
<hr/>		
Brother PT-E500	4.0.4	P
<hr/>		
Brother PT-E550W	4.0.4	P
<hr/>		
Brother PT-H500	4.0.4	P
<hr/>		
Brother PT-P700	4.0.4	P
<hr/>		
Brother PT-P750W	4.0.2	P
<hr/>		
Brother QL-1050	3.0.12	P
<hr/>		
Brother QL-1060N	3.0.12	P
<hr/>		
Brother QL-500	3.0.12	P
<hr/>		
Brother QL-550	3.0.12	P
<hr/>		
Brother QL-560	3.0.12	P
<hr/>		

---

Brother QL-570	3.0.12	P
----------------	--------	---

---

---

Brother QL-580N	3.0.12	P
-----------------	--------	---

---

---

Brother QL-650TD	3.0.12	P
------------------	--------	---

---

---

Brother QL-700	3.0.8	P
----------------	-------	---

---

---

Brother QL-710W	3.0.8	P
-----------------	-------	---

---

---

Brother QL-720NW	3.0.8	P
------------------	-------	---

---

**Read More on <https://iguruservices.com/support/brother-printer-drivers-mac-downloading-installation/>**